




CatchUp TV GUIDE



What is CatchUp TV?

CatchUp TV (also referred to as Play from Start TV) is a feature automatically included with your DVR service that allows you to go back 72 hours to catch the shows you may have missed. CatchUp is not available on all channels and programs.

How do I use CatchUp TV?

Press the  **GUIDE** button on your remote and use the  **LEFT** arrow to locate the show you want to watch. Press  **OK** to select the show you want to watch. If CatchUp is available you can press **OK** on the **Play From Start** icon.



Note: Shows not available for CatchUp will be grayed out on the guide.