

Exploring the Remote Control


The **DTA Channel Guide** lets you find programs with just a few taps of the remote control (Figure 1). Use these quick tips to enjoy full access to your guide.

- 1 GUIDE** – Displays TV Listing Grid
- 2 MENU** – Displays Parental Controls and General Setup
- 3 NAVIGATION BUTTONS** – Navigate or browse LEFT, UP, RIGHT, DOWN
- 4 OK / ENTER**
 - In TV Listings Grid: Selecting OK/Enter on a program currently airing will tune to that channel for immediate viewing.
 - In Parental Controls and General Setup: Activates or toggles a setting.
- 5 INFO**
 - Press 1x to Access the On Now/On Next Banner
 - Press 2x to Display the TV Listings Grid
 - Press 3x to Display the Program Information Screen
- 6 EXIT** – Exits guide and returns to full screen live TV.
- 7 PAGE UP (+) / DOWN (-)**
 - In the TV Listings Grid, scrolls UP and DOWN full screen (7 channels at a time).
- 8 LAST** – Returns you to the last screen or channel.
- 9 CHANNEL UP (+) / DOWN (-)**
 - Changes the channel while displaying the On Now/On Next Banner.
- 10 SETUP** – Used for remote control programming.
- 11 LANG** (LANGUAGE) – Access Audio Language settings.

Figure 1
Remote Control



Quick Start DTA Channel Guide

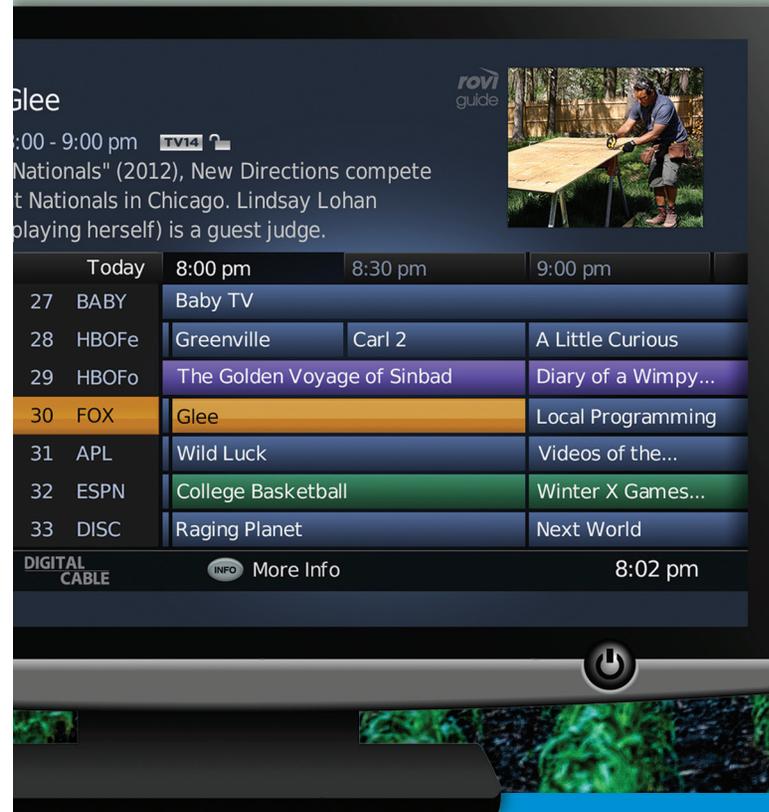

Accessing the DTA Channel Guide

There are three main display screens that present programming information, each leading to the other through an intuitive browsing experience. Get brief information about one program, move onto the bigger picture with a full TV Listing Grid or get detailed information for a selection. *It's Your Choice!*

On Now/On Next Banner

The **On Now/On Next** banner allows you to quickly toggle between what's **On Now** and what's **On Next** for each channel. Brief programming information is given for each selection.

To access, simply change the channel you are viewing or press the **INFO** button while watching live TV.

TV Listings Grid

This is the heart of the DTA Channel Guide, with up to 24 hours of programming data for the channel lineup associated with your cable service. The screen shows seven channels at any given time with 90 minutes of programming for each.

To access, press **GUIDE** while watching TV or press **INFO** from the **On Now/On Next** Banner.


Program Information Screen

Shows detailed program description information such as synopsis, rating, channel, time, series info, production year, and duration.


To access, press **INFO** from the TV Listings Grid.



On Now/On Next Banner

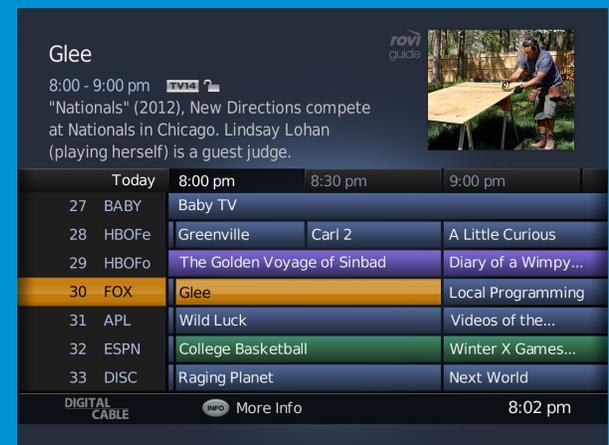

TV Listings Grid

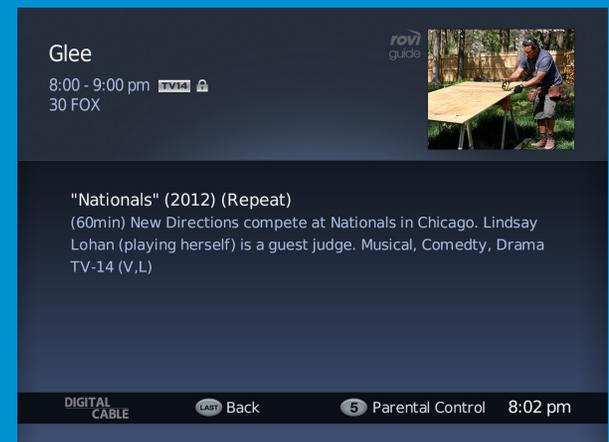

Program Information Screen