

# Overview of the Remote Control

## SYSTEM

Turns power on/off for up to five components

## DEVICE CONTROL

Selects the component you want to operate: AUX, DVD, VCR, TV, CBL

## SETTING MENU

### NAVIGATION

Arrow keys: Navigate to and highlight an item from the on-screen choices

#### OK/SEL

Selects highlighted screen options

## VOLUME

Raises and lowers the volume

## MUTE

Silences the audio

## LAST

Return to previous channel

## FAV

Displays favorite channels

## NOT AVAILABLE

## REPLAY ARROW

Replay previous few seconds of a program


## DVR FUNCTIONS

Perform standard DVD and VCR functions when in DVD and VCR mode and and VOD functions when in CABLE mode

## NOT AVAILABLE

## VIDEO SOURCE

Select the video source for available components through the Cable box

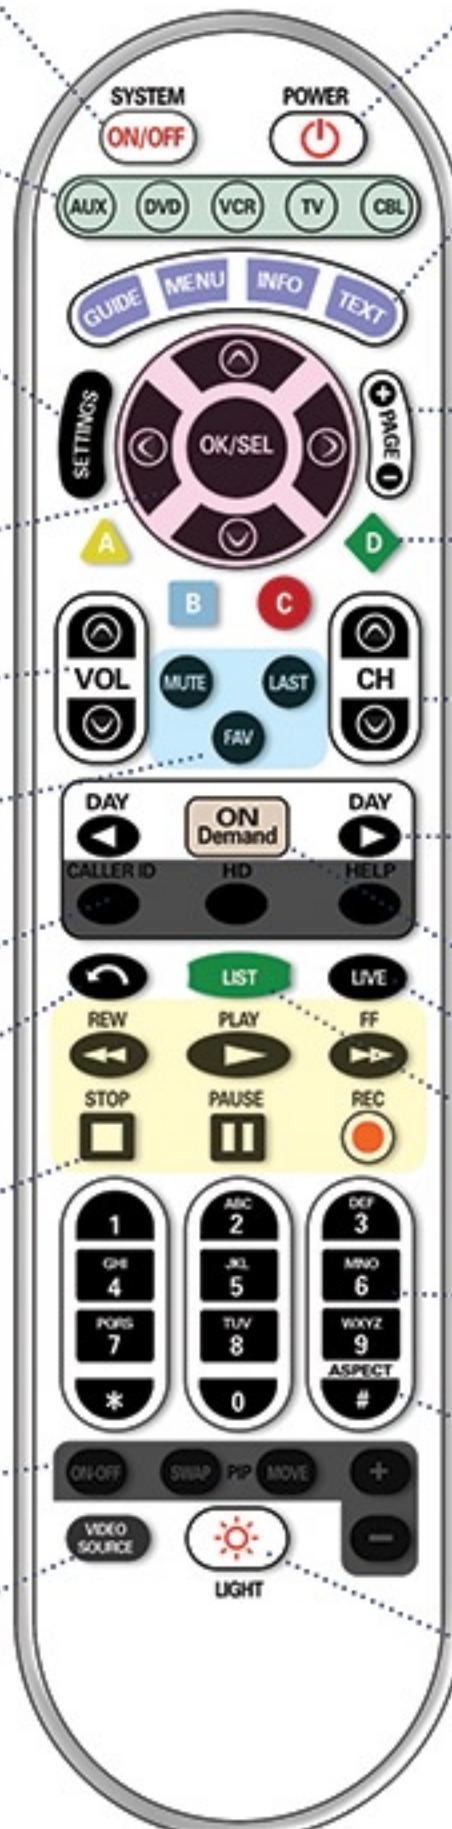

## POWER

Turns power on/off to TV, VCR, DVD Aux and cable box

## GUIDE

Displays the program guide listings

## MENU

Displays on screen menu

## INFO

Displays on-screen info about the current program

## EXIT

Exit current menu item

## PAGE + / -

Scroll to info above or below the info currently displayed on page

## SHORTCUT

A, B, C, D: Color-coded buttons correspond to features that are enabled by your service provider

## CHANNELS

Changes channels up and down

## DAY

◀ ▶ Skip forward or backward a day in the program guide

## ON Demand

Direct access to ON Demand channels

## LIVE

Displays live TV programming

## LIST

Displays a list of programs you have recorded

## NUMBERS

Enter numbers to tune channels. Also, make numeric entries on on-screen menus.

## ASPECT #

Changes the HD screen viewing aspect ratio through the cable box.

## LIGHT

Press to backlight keypad buttons. Press again to turn off or wait 10 seconds for auto shut-off